


HOW TO MAKE YOUR FIRST PICTURE A SUCCESS


It will be easier if you make your first color picture indoors with flash.
For each step we'll tell you the page in the instruction book that shows you what to do.

1. Open the camera and remove the instruction book (p. 6).

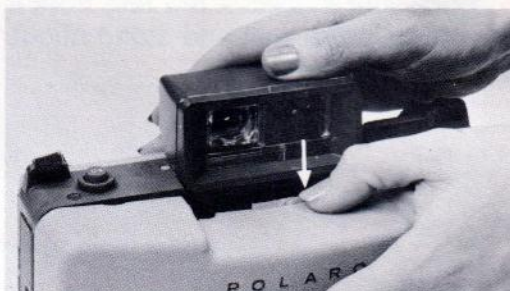

Press down, swing out.

2. Load the camera with color film. Close and lock the back, then pull out the safety cover (p. 13-15).

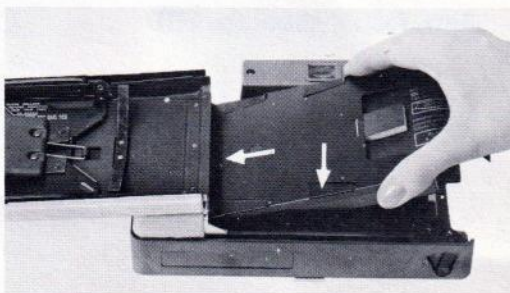

Push pack down into camera.

3. Pull out the front of the camera (p. 6).



Pull camera front out as far as it will go.

4. Place the flashgun on the camera and put in a flashbulb (p. 18-19).




Plug flashgun into outlet on side of camera.

5. Check that the Film Selector and the Lighten/Darken control are set as shown. If not, see p. 11.




Set Film Selector at 75.

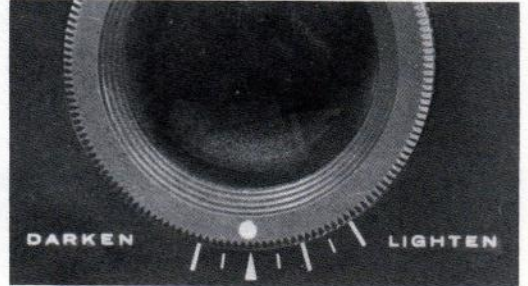

Leave L/D control at Normal.

6. Place your subject a few feet from a light colored or white wall and stand about 5 ft. from your subject (p. 20).

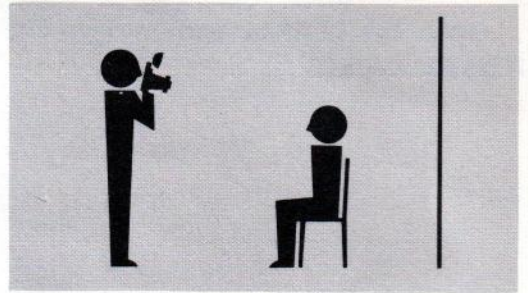


Find a good background.

7. Aim, focus, shoot (p. 20).



Push No. 1 buttons back and forth.

8. Pull the tabs to develop the picture, wait 60 seconds, then separate your picture (p. 24-26).

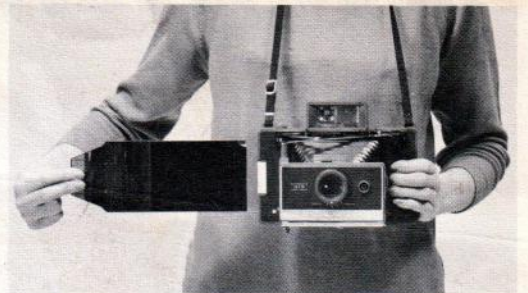

Pull white tab, then yellow tab.



Lift print quickly.

Now, please stop and read the instruction book from cover to cover.